



Original	Sustituto	Original	Sustituto
Standby / On	Power	Menu	Menu
Open / Close	Eject	Up	Up
1	1	Right	Right
2	2	Down	Down
3	3	Left	Left
4	4	Enter	Ok
5	5	Choice	Media
6	6	Display	Info
7	7	I<< Previous	I<<
8	8	>>I Next	>>I
9	9	Stop / Clear	Stop
0	0	Play / Select	Play
10	Pre Ch	Pause / Strobe	Pause
+10	Guide	<< / Slow -	<<
Return	Back	>> / Slow +	>>
Cancel	Exit	Play Mode	Shift + Play
Top Menu	Shift + Menu	Subtitle	Subt



