



| Original  | Sustituto   |
|---|---|
|    |  Mute / Dimmer               |
|    |  Power                       |
|    |  1                           |
|    |  2                           |
|    |  3                           |
|    |  4                           |
|    |  5                           |
|    |  6                           |
|    |  7                           |
|    |  8                           |
|   |  9                          |
|  |  Info / Angle              |
|  |  0                         |
|  |  AV / Input / RDS          |
|  |  Red / Netflix / Search    |
|  |  Green / APP / Repeat      |
|  |  Yellow / YouTube / Repeat |

| Original  | Sustituto   |
|---|---|
|    |  Blue / Prime Video / Random |
|    |  TV/Radio /                  |
|    |  CH+ / Page+                 |
|    |  Menu / Home                 |
|    |  Up                          |
|    |  Vol-                        |
|    |  Left                        |
|    |  OK                          |
|    |  Right                       |
|    |  Vol+                        |
|   |  Down                       |
|  |  Text / Goto               |
|  |  D.Menu / Top              |
|  |  CH- / Page-               |
|  |  Back / Return             |
|  |  Smart / List              |
|  |  Shift + Stop / Hold       |





| Original  | Sustituto   | Original | Sustituto |
|---|---|----------|-----------|
|  Up / Hold                 |  >>I / Preset+               |          |           |
|  << / F.T/L                |  << / Tune-                  |          |           |
|  Play / ?                  |  Play / Slow                 |          |           |
|  >> / Guide / Size         |  >> / Tune+                  |          |           |
|  >> / Guide / Size         |  Guide / EPG / -/-           |          |           |
|  Down / Timer              |  I<< / Preset-               |          |           |
|  Down / Timer              |  Display / Media             |          |           |
|  Rec / ◊                   |  Rec / Rec Mode              |          |           |
|  Stop / Cancel             |  Stop / Hold                 |          |           |
|  Stop / Cancel             |  Exit / Cancel / Clear       |          |           |
|  Pause / Subtitle / [≡i]  |  Pause / Step / Freeze      |          |           |
|  Pause / Subtitle / [≡i] |  Subtitle / EQ             |          |           |
|  Zoom                    |  Zoom / Size               |          |           |
|  Audio / Guide           |  Audio / Lang I/II         |          |           |
|  I / II                  |  Shift + Audio / Lang I/II |          |           |
|  I / II                  |  Sound / Title             |          |           |
|  Sleep                   |  Sleep / Timer             |          |           |

