


Original	Sustituto
	Smart / List
	Red / Netflix / Search
	Green / APP / Repeat
	Power
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	2
	4
	1
	6
	5
	Mute / Dimmer
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Display / Media

Original	Sustituto
	+  Shift + Mute / Dimmer
	Sleep / Timer
	AV / Input / RDS
	Setup / OPT /
	Audio / Lang I/II
	Subtitle / EQ
	D.Menu / Top
	Text / Goto
	Info / Angle
	TV/Radio /
	Eject / Surround
	Right
	Up
	+  Shift + Vol+
	+  Shift + CH+ /
	Left
	Down

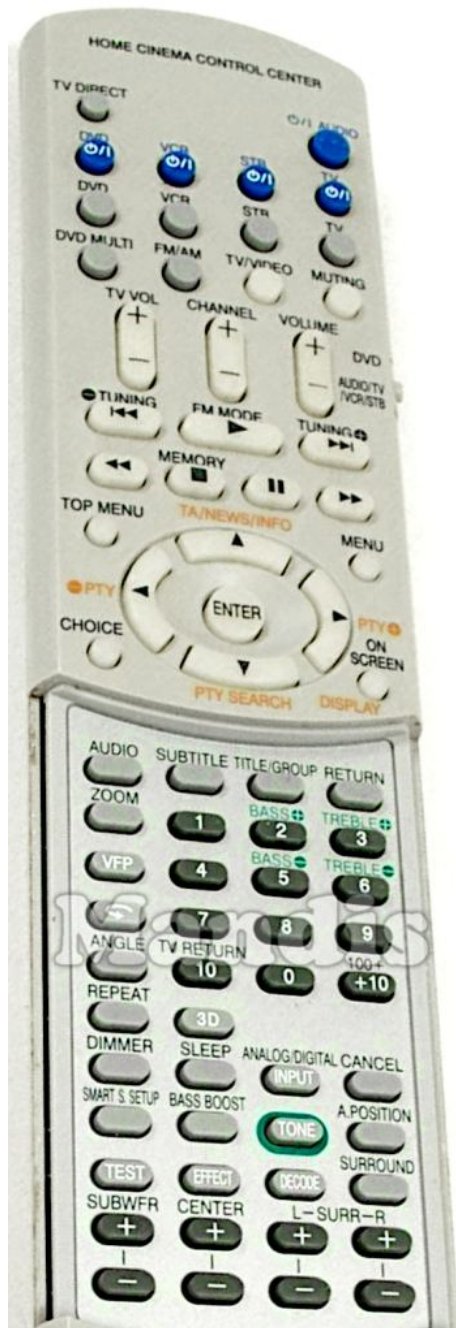


Screen



Original	Sustituto	Original	Sustituto
	 Shift + Vol-		
	 Shift + CH- /		



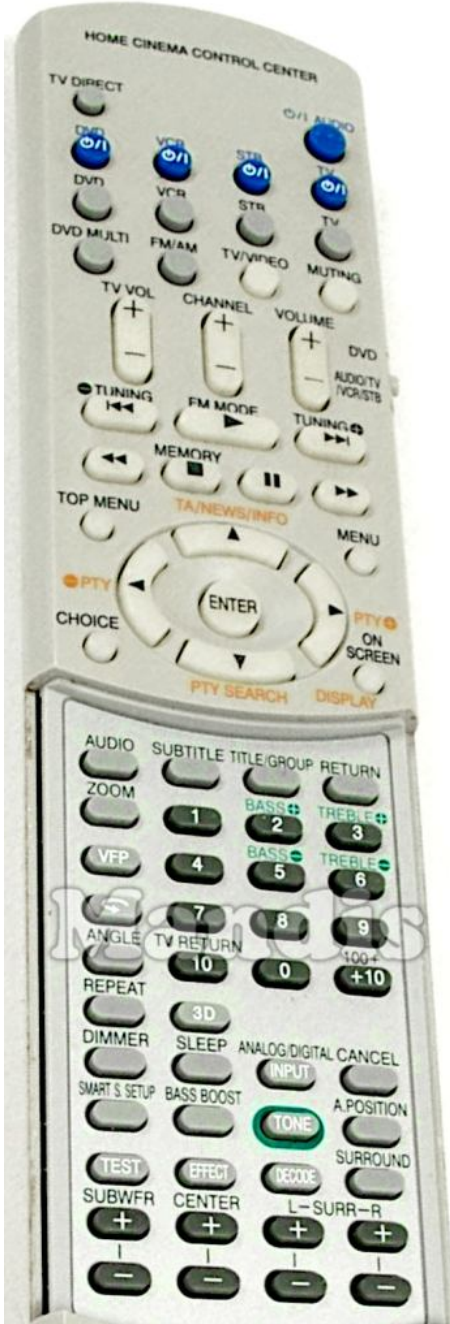


Original	Sustituto
Power Audio	Power
Power Tv	+  Shift + Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
Tuning- FM/AM	<< / Tune-
FM Mode FM/AM	Smart / List
Tuning+ FM/AM	>> / Tune+
Memory FM/AM	Menu / Home
TA/News/Info	Info / Angle
TA/News/Info	Up
PTY- FM/AM	Left
PTY+ FM/AM	Right
PTY Search	Down
PTY Search	Red / Netflix / Search

Original	Sustituto
Display FM/AM	Display / Media
1 FM/AM	+  Shift + 1
1 TV	1
2 FM/AM	+  Shift + 2
2 TV	2
3 FM/AM	+  Shift + 3
3 TV	3
4 FM/AM	+  Shift + 4
4 TV	4
5 FM/AM	+  Shift + 5
5 TV	5
6 FM/AM	+  Shift + 6
6 TV	6
7 FM/AM	+  Shift + 7
7 TV	7
8 FM/AM	+  Shift + 8
8 TV	8






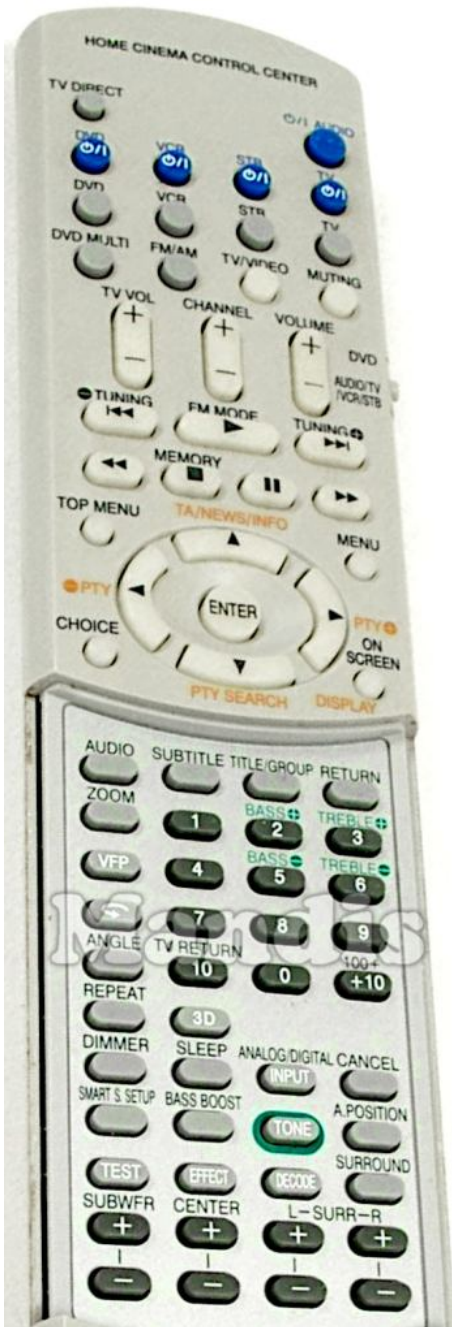




 


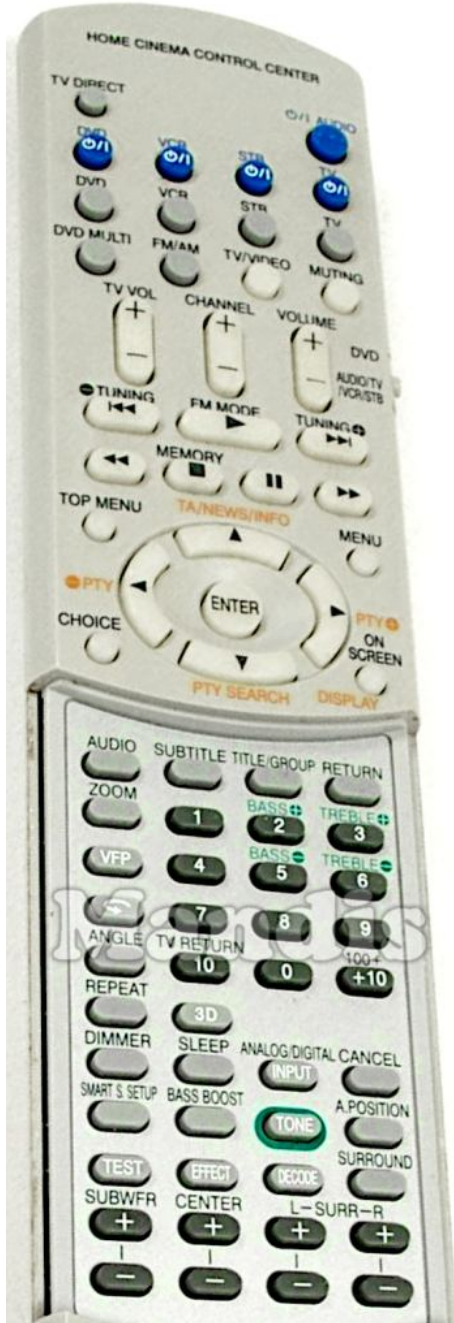



 

FM/AM



Original	Sustituto	Original	Sustituto
9	9 FM/AM	SHIFT + 9	Shift + 9
9	9 TV	9	9
TV RETURN 10	10 FM/AM	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
TV RETURN 10	10/Tv Return TV	SHIFT + HDMI - SAT 0	Shift + 0
0	0 TV	HDMI - SAT 0	0
100+ +10	+10/100+	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
100+ +10	+10 TV	PC FAV MARKER	Fav / Marker / PC






Original	Sustituto
 Power DVD	 Power
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Top Menu	 D.Menu / Top
 >>	 >> / Tune+
 Up	 Up
 Menu	 Menu / Home
 Left	 Shift + Left
 Enter	 OK
 Right	 Right
 Set Up	 Setup / OPT /
 Down	 Down
 On Screen	 Shift + Display / Media

Original	Sustituto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Title Group	 Shift + Sound / Title
 Return	 Back / Return
 DVD Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 VFP Progressive	 Smart / List
 4	 4
 5	 5
 6	 6
 ←	 Left
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle




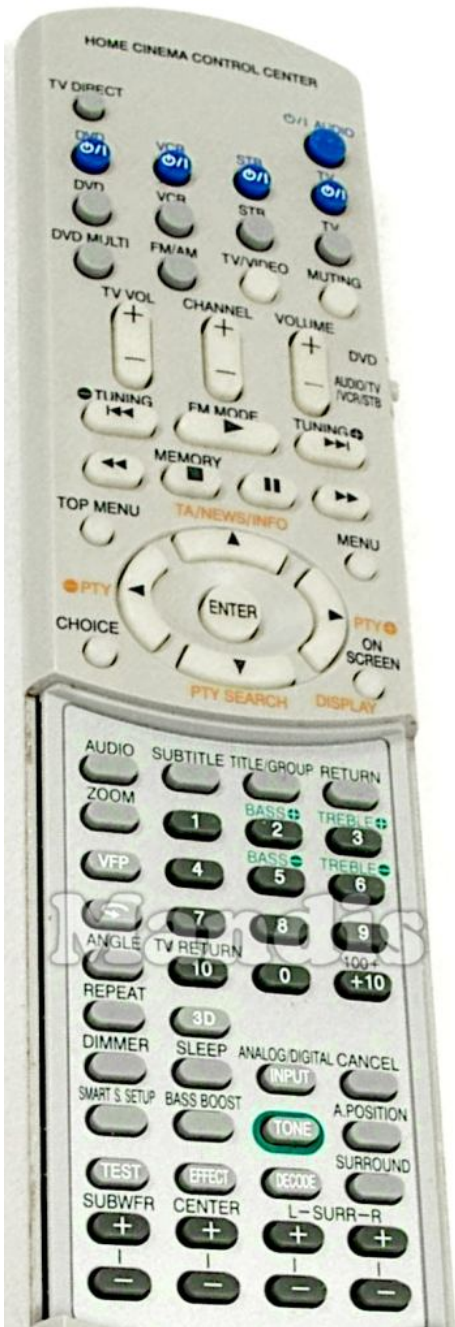

Original	Sustituto
10	Guide / EPG / -/--
0	0
+10	Fav / Marker / PC
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
Cancel	Exit / Cancel / Clear
HDD Sound Effect	Sound / Title
Surround	Eject / Surround

Original	Sustituto



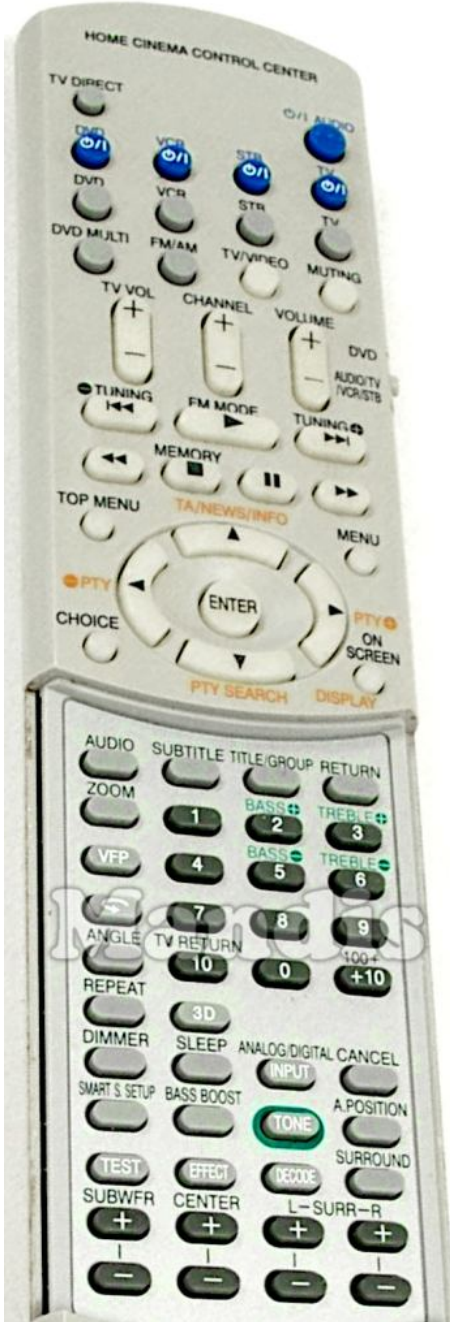

Original	Sustituto	Original	Sustituto
Power VCR	+  Shift + Power	3 VCR	+  Shift + 3
Power STB	Power	3 STB	3
VCR	+  Shift + Guide / EPG / -/-	4 VCR	+  Shift + 4
Muting	Mute / Dimmer	4 STB	4
Channel+	CH+ / Page+	5 VCR	+  Shift + 5
Volume+	Vol+	5 STB	5
Channel-	CH- / Page-	6 VCR	+  Shift + 6
Volume-	Vol-	6 STB	6
Play VCR	Play / Slow	7 VCR	+  Shift + 7
<< VCR	<< / Tune-	7 STB	7
Stop/Memory	Stop / Hold	8 VCR	+  Shift + 8
Pause VCR	Pause / Step / Freeze	8 STB	8
>> VCR	>> / Tune+	9 VCR	+  Shift + 9
1 VCR	+  Shift + 1	9 STB	9
1 STB	1	+10 TV	Guide / EPG / -/-
2 VCR	+  Shift + 2	0 VCR	+  Shift + 0
2 STB	2	0 STB	0

