


 





 

 








 


 




 


 

 







 





 



 

 

 

 

 







 




Original		Sustituto		Original		Sustituto	
	Power		Power		P-		Ch -
	TV / DTV		Smart		AV		AV
	Guide		Guide		Mute		Mute
	Up		Up		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3
	Menu		Menu		4		4
	Back		Back		5		5
	Zoom		Eject		6		6
	O↔O		Shift + Dual		7		7
	Red		Red		8		8
	Green		Green		9		9
	Yellow		Yellow		0		0
	Blue		Blue		(i)		Info
	P+		Ch +		[≡]		Text





Original	Sustituto
 [=i]	 Shift + Info
 [↑ ↓]	 3D
 [?]	 Media
 [TV]	 Stop
 TV / Radio	 TV/R
 /	 Dual
 [⊕]	 Shift + Subt
 [...]	 Subt

Original	Sustituto

