












 

 

 

 

 

 

 

 

 

 

 

 






| Original | Sustituto |
|---|---|
|  Power |  Power |
|  Eco/Dimmer |  3D |
|  Timer |  AV |
|  Record |  Rec |
|  RPT/RND |  Format |
|  Clock |  Media |
|  Display/Progra |  Info |
|  Audio In |  Red |
|  CD |  Yellow |
|  USB Memory |  Green |
|  Play |  Play |
|  Pause |  Pause |
|  Tuning/Group/PTY |  Ch + |
|  Tuning/Group/PTY Down |  Ch - |
|  >>I |  >>I |
|  I<< |  I<< |
|  Stop |  Stop |

| Original | Sustituto |
|--|--|
|  Display Mode |  Shift + Info |
|  Info/News |  Smart |
|  PTY Search |  TV/R |
|  FM |  Blue |
|  Sound Mode |  Dual |
|  HBS |  Subt |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  >10 |  Guide |



