





































Original	Sustituto
 Power TV	 Power
 1 CD	 Shift + 1
 1	 1
 2 CD	 Shift + 2
 2	 2
 3	 3
 3 CD	 Shift + 3
 4	 4
 4 CD	 Shift + 4
 5	 5
 5 CD	 Shift + 5
 6	 6
 6 CD	 Shift + 6
 7 CD	 Shift + 7
 7	 7
 8 CD	 Shift + 8
 8	 8

Original	Sustituto
 9	 9
 9 CD	 Shift + 9
 0 CD	 Shift + 0
 0	 0
 10	 Shift + Fav / Marker / PC
 10 CD	 Guide / EPG / -/-
 +10	 Shift + Guide / EPG / -/-
 +10 CD	 Fav / Marker / PC
 Tv/Video	 TV/Radio /
 CD	 Smart / List
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 Muting	 Mute / Dimmer
 Pause CD	 Pause / Step / Freeze
 <</ << CD	 << / Tune-
 Play CD	 Play / Slow
 Stop CD	 Stop / Hold





Original	Sustituto	Original	Sustituto
 >>/>>I CD	 >> / Tune+		











Original	Sustituto
Power DVD	Power
Test	1
Subwoofer-	Shift + Vol-
Subwoofer+	Shift + Vol+
Effect	4
Center-	5
Menu	Menu / Home
Center+	6
Bass/Boost	7
Enter	OK
Rear L-	8
Rear L+	9
Rear R-	0
Rear R+	Fav / Marker / PC
Sleep	Sleep / Timer
Surround	Eject / Surround
DSP Mode	Setup / OPT /

Original	Sustituto
Tv/Video	TV/Radio /
Vol+	Vol+
Vol-	Vol-
Muting	Mute / Dimmer
Pause	Pause / Step / Freeze
TV/VCR CH+	CH+ / Page+
TV/VCR CH-	CH- / Page-
Left	Left
<</><<	<< / Tune-
Play	Play / Slow
Up	Up
Stop	Stop / Hold
Down	Down
Right	Right
>>/>>	>> / Tune+







 

































Original	Sustituto	Original	Sustituto
 Power VCR	 Power	 Play	 Play / Slow
 1	 1	 Stop	 Stop / Hold
 2	 2	 >>	 >> / Tune+
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Input A/D	 AV / Input / RDS		
 TV/Video	 TV/Radio /		
 Pause	 Pause / Step / Freeze		
 TV/VCR CH+	 CH+ / Page+		
 TV/VCR CH-	 CH- / Page-		
 <<	 << / Tune-		

Original	Sustituto
	
	
	





Original	Sustituto
 Power Audio	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 Guide / EPG / -/--
 +10	 Fav / Marker / PC
 AM	 Red / Netflix / Search
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 TV/VCR CH+	 CH+ / Page+

Original	Sustituto
 TV/VCR CH-	 CH- / Page-

