



Original	Sustituto	Original	Sustituto
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Guide		Guide / EPG / -/-
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Tune-		<< / Tune-
	Pause		Pause / Step / Freeze
	Tune+		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow



