

 

 




 









 





Original	Sustituto	Original	Sustituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	P.Mode / OK		Smart / List
	Index		Play / Slow
	P.Mode / OK		Picture / Format
	AV		AV / Input / RDS
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Menu		OK
	Left / Vol-		Vol-
	Left / Vol-		Left
	Hold		Stop / Hold
	Right / Vol+		Right
	Right / Vol+		Vol+
	Sub Page		Subtitle / EQ
	Down / P-		Down
	Down / P-		CH- / Page-
	<<		<< / Tune-





Original	Sustituto	Original	Sustituto
	Rec		Rec / Rec Mode
	Cancel		Exit / Cancel / Clear
	Reveal		Pause / Step / Freeze
	i		Info / Angle
	Size		>> / Tune+
	Sleep / Timer		Sleep / Timer
	Size		Zoom / Size





Original	Sustituto	Original	Sustituto
	Vol-		
	Left		
	Vol+		
	Right		
	Up		
	CH+ / Page+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Down		
	CH- / Page-		
	Stop / Hold		
	Power		





Original	Sustituto	Original	Sustituto
	Vol-		
	Left		
	Right		
	Vol+		
	Up		
	CH+ / Page+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Down		
	CH- / Page-		
	Rec / Rec Mode		
	Stop / Hold		
	Power		

