

 

 


 


 



 



Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / STB	AV / Input / RDS
0	0
TV / Radio	TV/Radio /
CH +	CH+ / Page+
Mute	Mute / Dimmer
Vol +	Vol+
CH -	CH- / Page-

Original	Sustituto
Pause	Pause / Step / Freeze
Vol -	Vol-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Red / SUB-T	Subtitle / EQ
Red / SUB-T	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Timer	Yellow / YouTube / Repeat
Blue / Info	Blue / Prime Video / Random
Blue / Info	Info / Angle
P.STD	Picture / Format
P.Size	Zoom / Size





Original	Sustituto
 A L/R	 Sound / Title
 Text	 Text / Goto
 Recall	 Back / Return
 Recall	 Fav / Marker / PC
 EPG	 Guide / EPG / --
 A.Lang	 Audio / Lang I/II
 Sleep	 Sleep / Timer

Original	Sustituto

