
 
 
 
 




Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Source
	0
	Info
	DMP
	Up
	EPG

Original	Sustituto
	Left
	Enter
	Right
	Menu
	Down
	Exit
	Vol +
	List
	CH +
	Vol -
	CH -
	Fav
	Sleep
	Index
	Recall
	Red / <<
	Red / <<



 







 



 

 

 











 













 

 

 





 



 

 
 










Original	Sustituto
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	Blue / Prime Video / Random
Blue / >>I	>>I / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [≡X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Sustituto





Original		Sustituto		Original		Sustituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Sustituto
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>	 >> / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=]	 Text / Goto
 Stop/Still	 Stop / Hold
 [=+]	 Picture / Format
 [=o]/Subtitle	 Subtitle / EQ
 [=♦]/[+]	 Zoom / Size
 [=x]	 Setup / OPT /
 Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Original	Sustituto

