 

 

 






 

 

 
 
 


 



 

 






 





 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 PTY	 Smart
 Setup	 Menu
 Sound	 Dual
 Listen Mode	 List
 RDS Disp.	 Info

Original	Sustituto
 Up Multi Control	 Up
 Down Multi	 Down
 Right P.Call	 Right
 Left P.Call/ </>	 Left
 << Tuning	 <<
 >> Tuning	 >>
 <	 Back
 Play / Pause Band	 Play
 A/B +100 Disc	 TV/R
 Bass Boost	 Media
 Auto / Stop	 Stop
 Pause	 Pause
 Phono	 Red
 CD/DVD	 Green
 Tuner	 Yellow
 MD/Tape	 Blue
 Video1	 Eject





Original	Sustituto	Original	Sustituto
 Video 2	 AV		
 Mute	 Mute		
 Vol+	 Vol +		
 Vol-	 Vol -		





Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
Menu	Menu
OSD	Smart
Return	Back
Title	Info
Up	Up

Original	Sustituto
Down	Down
Right/>>>I	Right
Left/I<<<	Left
Enter	Ok
<< Tuning	<<
>> Tuning	>>
Play/Pause	Play
Stop	Stop
Pause	Pause

