















 
 























 





































Original	Sustituto	Original	Sustituto
 Power	 Power	 5	 5
 Sleep	 Sleep / Timer	 6	 6
 Tuner Band	 TV/Radio /	 7	 7
 P.Call Down	 Shift + Down	 8	 8
 P.Call Up	 Shift + Up	 9	 9
 Changer CD 1	 Shift + 1	 0	 0
 Changer CD 2	 Shift + 2	 +10	 Guide / EPG / -/-
 Changer CD 3	 Shift + 7	 I<<	 I<< / Preset-
 Changer CD 4	 Shift + 4	 >>I	 >>I / Preset+
 Changer CD 5	 Shift + 8	 Stop	 Stop / Hold
 Changer CD 6	 Shift + 9	 Play/Pause	 Play / Slow
 P	 OK	 Repeat	 Green / APP / Repeat
 Open/Close	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 1	 1	 Check	 Shift + OK
 2	 2	 Edit	 Text / Goto
 3	 3	 P.Mode	 Picture / Format
 4	 4	 AI/Auto/Focus/GE	 Info / Angle





Original	Sustituto
 Up	 Up
 Presence	 Setup / OPT /
 AI/Loudness	 Audio / Lang I/II
 Left	 Left
 EQ.Effect	 D.Menu / Top
 Right	 Right
 Off	 Shift + Mute / Dimmer
 M.Call	 Back / Return
 Down	 Down
 Display	 Display / Media
 S.W.Power	 Shift + Power
 S.W.Effect	 Shift + D.Menu / Top Menu
 S.W.Vol-	 Shift + Vol-
 S.W.Vol+	 Shift + Vol+
 Mute	 Mute / Dimmer
 LD/AUX	 AV / Input / RDS
 Tape	 Shift + 5

Original	Sustituto
 Tuner	 Shift + 6
 CD	 Shift + 3
 Volume Control -	 Vol-
 Volume Control +	 Vol+

