










 




 

 

 


 



















Original	Sustituto
	 Power
	 Sleep / Timer
	 Menu / Home
	 Guide / EPG / -/--
	 Info / Angle
	 TV/Radio /
	 Display / Media
	 Setup / OPT /
	 Fav / Marker / PC
	 Picture / Format
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 Subtitle / EQ
	 Sound / Title
	 Up
	 Down
	 I<< / Preset-

Original	Sustituto
	 >>I / Preset+
	 OK
	 Rec / Rec Mode
	 Shift + 6
	 AV / Input / RDS
	 Shift + 5
	 Red / Netflix / Search
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Original	Sustituto	Original	Sustituto
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	Vol Down		Vol-
	Vol Up		Vol+

