



Original	Sustituto
Auto Memory	Green / APP / Repeat
Memory	Red / Netflix / Search
Power Receiver	Power
PTY	Info / Angle
Display	Display / Media
Virtual	Smart / List
Active EQ	Subtitle / EQ
1	1
2	2
3	3
Bass Boost	Eject / Surround
4	4
5	5
6	6
Tone	Text / Goto
7	7
8	8

Original	Sustituto
9	9
Sound	Sound / Title
+10	Guide / EPG / -/-
0	0
HDMI Setup	Menu / Home
Setup	Setup / OPT /
Listen Mode	Blue / Prime Video / Random
Pure Audio	Yellow / YouTube / Repeat
Multi Control	CH- / Page-
Multi Control Up	CH+ / Page+
Volume+	Vol+
Volume-	Vol-
Band	TV/Radio /
Auto/Mono	Audio / Lang I/II
Mute	Mute / Dimmer
P.Call-	I<< / Preset-
P.Call+	>>I / Preset+












 




 

 









 

 





 



 



 



 



 











Original	Sustituto
Tuning-	<< / Tune-
Tuning+	>> / Tune+
HDMI 1	SHIFT + 8
HDMI 2	SHIFT + 9
HDMI 3	SHIFT + GUIDE EPG
HDMI 4	SHIFT + HDMI - SAT
DVD	SHIFT + 2
Video	SHIFT + 4
CD	SHIFT + CD - STB
AUX	SHIFT + 7
TV	SHIFT + 1
AV AUX	SHIFT + TAPE
Tuner	SHIFT + 6
Dimmer	SHIFT + DIMMER MUTE

Original	Sustituto





Original	Sustituto	Original	Sustituto
 Power DVD	 Power	 Left	 Left
 Audio	 Audio / Lang I/II	 Enter	 OK
 Subtitle	 Subtitle / EQ	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 On Screen	 Display / Media
 3	 3	 Return	 Back / Return
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 Play/Pause	 Play / Slow
 6	 6	 Stop	 Stop / Hold
 7	 7	 I<<	 I<< / Preset-
 8	 8	 >>I	 >>I / Preset+
 9	 9	 <<	 << / Tune-
 +10	 Guide / EPG / -/--	 >>	 >> / Tune+
 0	 0		
 Top Menu	 D.Menu / Top		
 Menu	 Menu / Home		
 Up	 Up		

