


 




 

 







 











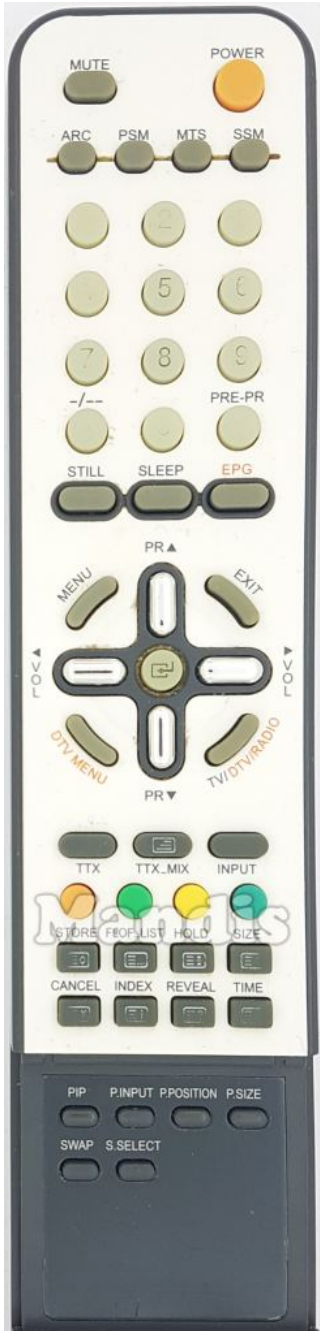 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 ARC	 Shift + 1
 PSM	 Shift + 2
 MTS	 Shift + 3
 SSM	 Shift + 4
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide

Original	Sustituto
 PRE-PR	 Pre Ch
 Still	 Media
 Sleep	 Sleep
 EPG	 Guide
 Menu	 Menu
 Exit	 Exit
 DTV Menu	 D. Menu
 Tv/DTV/Radio	 TV/R
 PR Up	 Ch +
 PR Down	 Ch -
 UP	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -





Original	Sustituto
TTX	Text
TTX.Mix	Shift + Text
Input	AV
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
[≡◇]/Store	Options
[≡..]/Flof_List	List
[≡+]/Hold	Dual
[≡◆]/Size	Format
[≡x]/Cancel	Back
[≡i]/Index	Info
[≡?]/Reveal	3D
[≡o]/Time	Subt
PIP	Shift + 3D
P.Input	Shift + AV

Original	Sustituto
P.Position	Shift + Eject
P.Size	Shift + Format
Swap	Eject
S.Select	Smart

