 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Green / Slow	 Green
 I<<	 I<<	 Yellow / Repeat	 Yellow
 >>I	 >>I	 Blue / A-B	 Blue
 <<	 <<	 CH +	 Ch +
 >>	 >>	 CH -	 Ch -
 Eject	 Eject	 TV Menu	 Menu
 Play / Pause	 Play	 Source	 AV
 Play / Pause	 Pause	 Vol +	 Vol +
 Stop	 Stop	 Vol -	 Vol -
 TV/TXT /	 Text	 DTV	 Smart
 Cancel / Zoom	 Shift + Eject	 DVD-Setup	 D. Menu
 Reveal / Subtitle	 Shift + Subt	 Up	 Up
 Hold / Menu	 Options	 Down	 Down
 Size / Angle	 Format	 Right	 Right
 Subpage / Title	 Shift + Text	 Left	 Left
 Index / Goto	 Media	 OK	 Ok
 Red / Program	 Red	 Exit	 Exit





Original	Sustituto	Original	Sustituto
 Display	 +  Shift + Info	 Sleep	 Sleep
 1	 1	 Info	 Info
 2	 2	 Subtitle	 Subt
 3	 3	 Channel List	 List
 4	 4	 EPG	 Guide
 5	 5	 TV / Radio	 TV/R
 6	 6	 FAV	 Pre Ch
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 +  Shift + Guide		
 Recall	 Back		
 Picture	 +  Shift + Format		
 Sound	 Dual		
 Nicam/A2	 +  Shift + AV		
 Mute	 Mute		

