 

 

 
 
 


 
 

 
 
 

 

 
 
 



 
 

 
 
 


 

 
 

 
 
 

 
 





 
 






 
 
 













Original	Sustituto	Original	Sustituto
 Power	 Power	 >>	 >>
 Open/Close	 Eject	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 <<	 <<
 3	 3	 Disc Menu	 D. Menu
 4	 4	 Info/Menu	 Info
 5	 5	 Back	 Back
 6	 6	 Home	 Smart
 7	 7	 Title/Popup	 Options
 8	 8	 Enter	 Ok
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Clear	 Exit	 Right	 Right
 Repeat	 Text	 Left	 Left
 Play	 Play	 Red	 Red
 Stop	 Stop	 Green	 Green
 Pause	 Pause	 Yellow	 Yellow





Original	Sustituto	Original	Sustituto
B	Blue	D	Blue
	Power Tv		Shift + Power
	Input Tv		AV
	Vol-		Vol -
	Vol+		Vol +

Original	Sustituto

