



Original	Sustituto	Original	Sustituto
	TV/PC		Eject / Surround
	Power		Power
	Input		AV / Input / RDS
	TV/Radio		TV/Radio /
	Text		Text / Goto
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List

Original	Sustituto	Original	Sustituto
	0		0
	Q.View		Display / Media
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Return		Back / Return
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	FAV		Fav / Marker / PC





	Original	Sustituto	Original	Sustituto
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Stop	 Stop / Hold		
	Yellow	 Yellow / YouTube / Repeat		
	Play	 Play / Slow		
	Blue	 Blue / Prime Video / Random		
	Pause	 Pause / Step / Freeze		
	Q.Menu	 D.Menu / Top		
	<<	 << / Tune-		
	T.OPT	 Setup / OPT /		
	>>	 >> / Tune+		
	Subtitle	 Subtitle / EQ		
	Mark	 Picture / Format		

