



Original	Sustituto	Original	Sustituto
 Power	 Power	 Rec	 Rec
 D/A Input	 Smart	 I<<	 I<<
 Tv/Radio	 TV/R	 <<	 <<
 Input	 AV	 >>	 >>
 Bright+	 Shift + Right	 >>	 >>
 Bright-	 Shift + Left	 Exit	 Exit
 Simplink	 Media	 Back	 Back
 Text	 Text	 Menu	 Menu
 Ratio	 Format	 Info	 Info
 I/II	 Dual	 Guide	 Guide
 Red	 Red	 Up	 Up
 Green	 Green	 Down	 Down
 Yellow	 Yellow	 Right	 Right
 Blue	 Blue	 Left	 Left
 Stop	 Stop	 OK	 Ok
 Play	 Play	 Vol+	 Vol +
 Pause	 Pause	 Vol-	 Vol -





Original		Sustituto	
MUTE	Mute	MUTE	Mute
FAV	FAV	FAV PRE-CH	Pre Ch
PR +	PR+	+ CH	Ch +
PR -	PR-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
LIST	List	DISC NAV LIST	List
Q.VIEW	Q.View	SETTINGS OPT	Options
UPDATE	[≡x]/Update	SHIFT + SEARCH TV/R	Shift + TV/R

Original		Sustituto	
INDEX	[≡i]/Index	E-MANUAL D.MENU	D. Menu
TIME	[≡o]/Time	SHIFT + CLEAR EXIT	Shift + Exit
SLEEP	Sleep	PROG SLEEP	Sleep
HOLD	[≡+]/Hold	ECO 3D	3D
REVEAL	[≡?]/Reveal	ZOOM ▲	Eject
SUBTITLE	Subtitle	AD SUBT	Subt





	Original	Sustituto	Original	Sustituto
	Power			4
	Stop			5
	Play			6
	Pause			7
	I<<			8
	>>			9
	>>			0
	Menu			
	Up			
	Down			
	Right			
	Left			
	OK			
	1			
	2			
	3			





	Original	Sustituto	Original	Sustituto
	Power			8
	Input			9
	Stop			0
	Play			
	Pause			
	Rec			
	<<			
	>>			
	PR+			
	PR-			
	1			
	2			
	3			
	4			
	5			
	6			
	7			

