



Original	Sustituto
Tuner	Shift + 6
Power	Power
Open / Close	Eject / Surround
Aux	Shift + 7
DVD	Shift + 2
USB	Shift + 8
Dimmer	Shift + Mute / Dimmer
Prog / Memo	TV/Radio /
Audio	Audio / Lang I/II
Sound	Sound / Title
S-Title	Subtitle / EQ
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
<< / Scan -	<< / Tune-

Original	Sustituto
I<< / Skip -	I<< / Preset-
>>I / Skip +	>>I / Preset+
>> / Scan +	>> / Tune+
Title	Shift + Sound / Title
Stop	Stop / Hold
Play	Play / Slow
Pause / Step	Pause / Step / Freeze
Zoom	Zoom / Size
Setup	Setup / OPT /
Display	Display / Media
Menu	Menu / Home
Up / Preset +	Up
Return	Back / Return
Left / Tun. -	Left
Enter	OK
Right / Tun. +	Right
Down / Preset -	Down





Original	Sustituto
	Smart / List
	Sleep / Timer
	Vol+
	Text / Goto
	Mute / Dimmer
	Vol-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Picture / Format
	0

Original	Sustituto
	Info / Angle
	Shift + Power
	CH+ / Page+
	Shift + Vol+
	AV / Input / RDS
	CH- / Page-
	Shift + Vol-

