



 


 

 

 

 


 
 
 
 

 
 
 

 

 
 
 
 

 

 
 
 




 
 
 
 
 
 
 
 

 

 

 

 



 

 

 
 






Original	Sustituto	Original	Sustituto
	Power		Power
	Open/Close		Eject
	Radio & Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause
	Speaker Level		Dual
	Sound Effect		Subt
	Optical		Options
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	3D Sound		3D
	Info/Display		Info
	Back		Back
	Title/Pop Up		Media
	Disc Menu		D. Menu



