




 
 
 








 
 
 


 



 

 

 

 

 




Original	Sustituto
 Power	 Power
 Tv/Rad	 TV/R
 Subtitle	 Subt
 AD/PIP/*	 Dual
 TV/PC	 Smart
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Original	Sustituto
 Q.View	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Guide	 Guide
 FAV	 Pre Ch
 P+	 Ch +
 P-	 Ch -
 Text	 Text
 Info	 Info
 T.Opt	 Options
 Settings	 Shift + Options
 Q.Menu	 Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down





Original	Sustituto	Original	Sustituto
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Simplink	 Format		
 Rec/*	 Rec		
 Stop	 Stop		
 <<<	 <<<		
 Play	 Play		
 Pause	 Pause		
 >>>	 >>>		
 Red	 Red		
 Green	 Green		
 Yellow/Brightness-	 Yellow		
 Blue/Brightness+	 Blue		

Original	Sustituto

