



Original	Sustituto
Power	Power
Open/Close	Eject / Surround
Power Tv	+ Shift + Power
1	1
2	2
3	3
PR/CH+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/CH- Tv	CH- / Page-
7	7
8	8
9	9
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0

Original	Sustituto
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>> / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Info/Display	Info / Angle
Right	Right
Enter	OK
Left	Left
Back	Back / Return
Down	Down





	Original	Sustituto
	Disc Menu	D.Menu / Top
	Zoom	Zoom / Size
	Marker	Fav / Marker / PC
	Search	Shift + Red / Netflix /
	Title/Pop-Up	TV/Radio /
	Red	Red / Netflix / Search
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat
	Blue	Blue / Prime Video / Random
	Repeat	Shift + Green / APP /
	O)/Audio	Audio / Lang I/II
	[...]/Subtitle	Subtitle / EQ
	Tv Mute	Mute / Dimmer

	Original	Sustituto

