



 





























 



 

 
 
 

 


 
 
 



 
 
 



 

 




Original	Sustituto
 Power	 Power
 TV	 Shift + 1
 Caption	 Subtitle / EQ
 AV Mode	 Eject / Surround
 [] / Ratio	 TV / Radio /
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Sustituto
 Flashbk	 Text / Goto
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH/Page-	 CH- / Page-
 CH/Page+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Info	 Info / Angle
 Sound	 Sound / Title
 Settings	 Setup / OPT /
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original	Sustituto	Original	Sustituto
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Simplink		Display / Media
	Sleep		Sleep / Timer
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Sustituto

