 

 

 

 

 







 

 

 

 





 



 

 

 

 

 

 

 

 


 


 

 

 

 

 

 





| Original | Sustituto |
|--|--|
|  Power |  Power |
|  Open/Close |  Eject / Surround |
|  Power Tv |  Shift + Power |
|  DVD |  Shift + 2 |
|  HDD |  Shift + 7 |
|  AV |  AV / Input / RDS |
|  AV Tv |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  PR+ Tv |  Shift + CH+ / |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  PR- Tv |  Shift + CH- / |
|  7 |  7 |
|  8 |  8 |

| Original | Sustituto |
|---|--|
|  9 |  9 |
|  Vol+ Tv |  Vol+ |
|  Tv/DVD |  TV/Radio / |
|  0 |  0 |
|  Mute Tv |  Mute / Dimmer |
|  Vol- Tv |  Vol- |
|  Display |  Display / Media |
|  Text |  Text / Goto |
|  Tv/Radio |  Shift + TV/Radio / Program |
|  Rec |  Rec / Rec Mode |
|  Zoom |  Zoom / Size |
|  Repeat |  Shift + Green / APP / |
|  << / Tune- |  << / Tune- |
|  >> / Tune+ |  >> / Tune+ |
|  I<< / Preset- |  I<< / Preset- |
|  >>I / Preset+ |  >>I / Preset+ |
|  Pause |  Pause / Step / Freeze |



