



















 



 














 
























Original	Sustituto	
On/Off		Power
3.*	 + 	Shift + 3
Store		Setup / OPT /
Reveal		Play / Slow
On/Off	 + 	Shift + Power
Tune+		>> / Tune+
Tune-		<< / Tune-
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search

Original	Sustituto	
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Tone-		I<< / Preset-
Tone+		>>I / Preset+
3		3
Audio+	 + 	Shift + Vol+
Search	 + 	Shift + Red / Netflix /
4.# 16:9		Picture / Format
Surround		Eject / Surround
Nicam/Mono	 + 	Shift + Audio / Lang I/II
Level L	 + 	Shift + Left
Level R/Woofers	 + 	Shift + Right
Display		Display / Media
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Info / Angle



Original	Sustituto	Original	Sustituto
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Menu audio	 Audio / Lang I/II
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		

