 


 
 


 
 



 



 
 
 


 
 

 
 
 
 


 




Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 TV	 TV/R
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Ch +
 P -	 Ch -

Original	Sustituto
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Exit	 Exit
 Mute	 Mute
 Source	 AV
 Audio	 Dual
 Info	 Info
 Subtitle	 Subt
 Size	 Format
 Presets	 Pre Ch



