



 

 

 

 

 


 
 

 



 

 

 

 

 







Original	Sustituto
	 Mute / Dimmer
	 Power
	 Sleep / Timer
	 Smart / List
	 Audio / Lang I/II
	 Picture / Format
	 D.Menu / Top
	 TV/Radio /
	 Shift + Red / Netflix /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8

Original	Sustituto
	 9
	 Guide / EPG / -/-
	 0
	 AV / Input / RDS
# PIP button" data-bbox="507 348 540 378"/>	 Setup / OPT /
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Down
	 Vol+
	 Right





 




Original	Sustituto	Original	Sustituto
	P-		CH- / Page-
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Title		Sound / Title
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/Card		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold





Original	Sustituto
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 AV / Input / RDS
	 0
	 Picture / Format
	 Menu / Home
	 Info / Angle

Original	Sustituto
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Down
	 Vol+
	 Right
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Sound / Title
	 Blue / Prime Video / Random
	 << / Tune-
	 Play / Slow
	 >> / Tune+





 

 

 
 
 

 

 

 





 

 

 

 

 







Original	Sustituto	Original	Sustituto
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold





Original	Sustituto
 Mute	 Mute / Dimmer
 Power	 Power
 O/F.Set	 Sleep / Timer
 []/F. List	 Smart / List
 Audio/Repeat	 Shift + Green / APP /
 Audio/Repeat	 Audio / Lang I/II
 [+]/Picture	 Picture / Format
 →[]←/Rec Menu	 Text / Goto
 Radio/Search	 Shift + Red / Netfix /
 Radio/Search	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Sustituto
 8	 8
 9	 9
 DVD-AV	 AV / Input / RDS
 0/AV	 0
 # PIP	 Setup / OPT /
 Disc-M	 D.Menu / Top
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Right	 Right





Original		Sustituto		Original	Sustituto
	P-		CH- / Page-		
	Red/C-Set		Red / Netflix / Search		
	Green/SV		Green / APP / Repeat		
	Yellow/Title		Yellow / YouTube / Repeat		
	Yellow/Title		Sound / Title		
	Blue/Card		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		





Original	Sustituto
	Mute / Dimmer
	Power
	Sleep / Timer
	Smart / List
	Green / APP / Repeat
	Audio / Lang I/II
	Picture / Format
	D.Menu / Top
	Red / Netflix / Search
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7

Original	Sustituto
	8
	9
	Guide / EPG / -/--
	0
	AV / Input / RDS
# PIP button"/>	Setup / OPT /
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Down
	Vol+
	Right





Original	Sustituto	Original	Sustituto
	P-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

