


 
 

 

 

 

 




 

 



 



 

 
 
 





 
 

 

 

 



 



 

 






Original	Sustituto
	 Power
	 Mute
	 Shift + Red
	 Shift + Yellow
	 Shift + Green
	 Shift + Blue
	 AV
	 Format
	 Dual
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8

Original	Sustituto
	 9
	 0
	 Guide
	 Media
	 Pre Ch
	 Text
	 Menu
	 Exit
	 Info
	 Vol +
	 Vol -
	 Ch +
	 Ch -
	 Up
	 Down
	 Right
	 Left



 

 
 


 

 
 
 

 

 


 



 







 

 

 













 

 









 
 

 
 
 
 



 




Original	Sustituto	Original	Sustituto
 OK	 Ok		
 Red/Music	 Red		
 Green/Movie	 Green		
 Yellow/Show	 Yellow		
 Blue/Off	 Blue		
 <</Tune-	 <<		
 Play	 Play		
 >>/Tune+	 >>		
 Rec/Memory	 Rec		
 Pause	 Pause		
 Stop/ASP	 Stop		





Original	Sustituto
 Power	 Power
 TV	 +  Shift + Red
 REC	 +  Shift + Green
 SP	 +  Shift + Yellow
 AUDIO	 +  Shift + Blue
 Timer/IN-Mode	 AV
 >[]</5/7CH	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0

Original	Sustituto
 EPG/Bass	 Guide
 Media/Surr	 Media
 PIP/AUX	 Pre Ch
 Text	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red/Music	 Red
 Green/Movie	 Green
 Yellow/Show	 Yellow



 



 

 



 


 
 
 

 


 
 
 
 
 
 
 


 






	Original	Sustituto	Original	Sustituto
	Blue/Off			
	<</Tune-			
	Play			
	>>/Tune+			
	Rec/Memory			
	Pause			
	Stop/ASP			



 













Original	Sustituto
 Power	 Power
 TV	 Shift + Red
 REC	 Shift + Green
 SP	 Shift + Yellow
 AUDIO	 Shift + Blue
 Mute	 Mute
 Timer/IN-Mode	 AV
 >[]</5/7/CH (1)	 Format
 Sound	 Dual
 EPG/Bass (1)	 Guide
 Media/Surr	 Media
 Sound1	 1
 Sound2	 2
 Sound3	 3
 Sound4	 4
 >[]</5/7/CH (2)	 Shift + Format
 EPG/Bass (2)	 5

Original	Sustituto
 EPG/Bass (3)	 6
 PIP/AUX (1)	 Pre Ch
 PIP/AUX (2)	 Shift + 1
 PIP/AUX (3)	 Shift + 2
 PIP/AUX (4)	 Shift + 3
 PIP/AUX (5)	 Shift + 4
 PIP/AUX (6)	 Shift + 5
 PIP/AUX (7)	 Shift + 6
 Text	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left



 
 


 
 
 
 


 




 

 






 

 

 
 




 


 

 





 

 

 
 


 

 


 

 


 






Original		Sustituto		Original		Sustituto	
	Vol+		Vol +				
	Vol-		Vol -				
	Red/Music		Red				
	Green/Movie		Green				
	Yellow/Show		Yellow				
	Blue/Off		Blue				





Original	Sustituto
 Power	 Power
 TV	 Shift + Red
 REC	 Shift + Green
 SP	 Shift + Yellow
 AUDIO	 Shift + Blue
 Timer/IN-Mode	 AV
 >[]</5/7/CH	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0

Original	Sustituto
 EPG/Bass	 Guide
 Media/Surr	 Media
 PIP/AUX	 Pre Ch
 Text	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red/Music	 Red
 Green/Movie	 Green
 Yellow/Show	 Yellow





Original	Sustituto	Original	Sustituto
 Blue/off	 Blue		
 <</Tune-	 <<		
 Play	 Play		
 >>/Tune+	 >>		
 Rec/Memory	 Rec		
 Pause	 Pause		
 Stop/ASP	 Stop		

