
















 



 

 

 

 

 

 











 





 

 

 

 












 



 


 






Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol-	 Vol -
 TV	 TV/R	 Mute	 Mute
 VT	 Smart	 →←	 Media
 BTX	 Pre Ch	 i	 Info
 1	 1	 Guide	 Guide
 2	 2	 Audio	 Dual
 3	 3	 Brightness+	 Up
 4	 4	 Brightness-	 Down
 5	 5	 (+)Color+	 Right
 6	 6	 (+)Color-	 Left
 7	 7	 (O)	 Subt
 8	 8	 []	 Text
 9	 9	 ▲ M	 Menu
 0	 0	 ▼↔	 Ok
 P+	 Ch +	 ▲[≡>]	 >>
 P-	 Ch -	 ▼[-]	 <<
 Vol+	 Vol +	 +/+	 3D





Original		Sustituto		Original		Sustituto	
	MEM/CM		Rec				
	X Lock		Options				
	-		Format				
	[>≡]		AV				
	[≡◆≡]		Back				
	00:00		Exit				
	? [≡/]		Eject				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

