



| Original |         | Sustituto |                  | Original |                   | Sustituto |                       |
|----------|---------|-----------|------------------|----------|-------------------|-----------|-----------------------|
|          | Power   |           | Power            |          | 7                 |           | 7                     |
|          | Mute    |           | Mute / Dimmer    |          | 8                 |           | 8                     |
|          | Vol-    |           | Vol-             |          | 9                 |           | 9                     |
|          | Vol+    |           | Vol+             |          | 0                 |           | 0                     |
|          | P-      |           | CH- / Page-      |          | -/--              |           | Guide / EPG / -/--    |
|          | P+      |           | CH+ / Page+      |          | Contrast-         |           | I<< / Preset-         |
|          | Power 2 |           | Shift + Power    |          | Contrast+         |           | >>I / Preset+         |
|          | [ + ]   |           | Display / Media  |          | Brightness-       |           | Down                  |
|          | PP      |           | Back / Return    |          | Brightness+       |           | Up                    |
|          | [ ]     |           | Info / Angle     |          | Text              |           | Text / Goto           |
|          | [ ]↔    |           | Picture / Format |          | Text Subcode      |           | Subtitle / EQ         |
|          | 1       |           | 1                |          | Text Hold         |           | Shift + Stop /        |
|          | 2       |           | 2                |          | Text Size         |           | Zoom / Size           |
|          | 3       |           | 3                |          | Text Reveal       |           | Smart / List          |
|          | 4       |           | 4                |          | Text Index / Play |           | Play / Slow           |
|          | 5       |           | 5                |          | Text Mix          |           | Shift + Text /        |
|          | 6       |           | 6                |          | Text Cancel       |           | Exit / Cancel / Clear |









| Original |         | Sustituto |                  | Original     |              | Sustituto |                       |
|----------|---------|-----------|------------------|--------------|--------------|-----------|-----------------------|
|          | Power   |           | Power            |              | 7            |           | 7                     |
|          | Mute    |           | Mute / Dimmer    |              | 8            |           | 8                     |
|          | Vol-    |           | Vol-             |              | 9            |           | 9                     |
|          | Vol+    |           | Vol+             |              | 0            |           | 0                     |
|          | P-      |           | CH- / Page-      |              | -/--         |           | Guide / EPG / -/--    |
|          | P+      |           | CH+ / Page+      |              | Text         |           | Text / Goto           |
|          | Power 2 |           | Shift + Power    |              | Text Subcode |           | Subtitle / EQ         |
|          | [ + ]   |           | Display / Media  |              | Text Hold    |           | Shift + Stop /        |
|          | PP      |           | Back / Return    |              | Text Size    |           | Zoom / Size           |
|          | [ ]     |           | Info / Angle     |              | Text Reveal  |           | Smart / List          |
|          | [ ]↔    |           | Picture / Format |              | Play         |           | Play / Slow           |
|          | 1       |           | 1                |              | Text Mix     |           | Shift + Text /        |
|          | 2       |           | 2                |              | Text Cancel  |           | Exit / Cancel / Clear |
|          | 3       |           | 3                |              | Rec          |           | Rec / Rec Mode        |
|          | 4       |           | 4                |              | Stop         |           | Stop / Hold           |
|          | 5       |           | 5                | << button"/> | <<           |           | << / Tune-            |
|          | 6       |           | 6                | >> button"/> | >>           |           | >> / Tune+            |

