



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Sleep	 Sleep / Timer
	 Shift + 1
	 Shift + 2
 CH.List	 Smart / List

Original	Sustituto
 Source	 AV / Input / RDS
 Up	 Up
 Audio / Nicam	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 Mouse On/Off	 D.Menu / Top
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Home	 Shift + Menu /
 CH-	 CH- / Page-
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title





Original	Sustituto	Original	Sustituto
Display	Display / Media	Yellow	Yellow / YouTube / Repeat
Fav	Fav / Marker / PC	Blue	Blue / Prime Video / Random
TXT	Text / Goto		
Sub / Index	Subtitle / EQ		
EPG / S.Page	Guide / EPG / -/--		
Size	Zoom / Size		
Stop	Stop / Hold		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Hold / Aspect	Setup / OPT /		
Hold / Aspect	Shift + Stop /		
Play / Pause	Play / Slow		
<<	<< / Tune-		
>>	>> / Tune+		
Reveal / Antena	TV/Radio /		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		

