






Original	Sustituto
 Standby	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Tv/Radio	 TV/Radio /
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Media	 Shift + Display / Media
 Media	 Setup / OPT /
 CH-	 CH- / Page-





	Original	Sustituto	Original	Sustituto
	Rec	 Rec / Rec Mode		 Red / Netflix / Search
	T.Shift	 Info / Angle		 Green / APP / Repeat
	I/II/Audio	 Audio / Lang I/II		 Yellow / YouTube / Repeat
	Size/Aspect	 Zoom / Size		 Blue / Prime Video / Random
	Text	 Text / Goto		
	Reveal	 D.Menu / Top		
	Hold	 +  Shift + Stop /		
	Subpage	 Eject / Surround		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	Index/Rec List	 Smart / List		
	Subtitle	 Subtitle / EQ		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	I<<	 I<< / Preset-		
	>>I/Mix	 >>I / Preset+		

