 

 



 





 

 

 

 

 



 













Original	Sustituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0
 Recall	 Back / Return
 Setup	 Setup / OPT /
 EPG	 Guide / EPG / -/--
 Source	 AV / Input / RDS

Original	Sustituto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Ch.List	 Smart / List
 FAV	 Fav / Marker / PC
 Exit/Cancel	 Exit / Cancel / Clear
 CH+/Page+	 CH+ / Page+
 Vol+	 Vol+
 S.Mode	 Sound / Title
 Vol-	 Vol-
 P.Mode	 Picture / Format
 CH-/Page-	 CH- / Page-
 Red/Goto	 Red / Netflix / Search





Original	Sustituto
Green/A-B	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
Record	Rec / Rec Mode
Rec. List	Shift + Rec / Rec Mode
TV/Radio	TV/Radio /
Scaler	Menu / Home
Play	Play / Slow
Pause/Reveal	Pause / Step / Freeze
Stop/Index	Stop / Hold
I<<	I<< / Preset-
<</Mix	<< / Tune-
>>I	>>I / Preset+
>>	>> / Tune+
Text	Text / Goto
S.Page /	D.Menu / Top
Hold/Title	Shift + Stop / Hold

Hold

Original	Sustituto
Zoom-	Shift + Zoom /
Zoom+/Size	Zoom / Size
Eject	Eject / Surround
Sleep	Sleep / Timer

