
 
 


 






 




 


 








Original	Sustituto	Original	Sustituto
On/Off	 Power	3	 3
Mute	 Mute	4	 4
Return TV	 TV/R	5	 5
TV/AV	 AV	6	 6
Menu	 MENU	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	2.Fav P/C 2.	 Pre Ch
Back	 Back		
Volume+	 Vol +		
Chan.Up	 Ch +		
Volume-	 Vol -		
Chan.Down	 Ch -		
1	 1		
2	 2		

