









 



 
 



 



 



 



 


 
 


 
 


 
 


 
 

 
 
 



 



 


 
 








| Original | Sustituto | Original | Sustituto |
|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|  Standby |  Power |  Right |  Right |
|  Display |  Shift + Info |  Down |  Down |
|  Nicam / Eject |  Eject |  Source |  AV |
|  Mute |  Mute |  Exit |  Exit |
|  P.Mode |  Shift + Format |  1 |  1 |
|  S.Mode |  Shift + Dual |  2 |  2 |
|  Sleep |  Sleep |  3 |  3 |
|  Aspect |  Format |  4 |  4 |
|  Vol - |  Vol - |  5 |  5 |
|  Vol + |  Vol + |  6 |  6 |
|  CH - |  Ch - |  7 |  7 |
|  CH + |  Ch + |  8 |  8 |
|  LCD-Menu |  Menu |  9 |  9 |
|  DVD-Setup |  Options |  0 |  0 |
|  Up |  Up |  Recall |  Back |
|  Left |  Left |  Text / Audio |  Text |
|  Enter |  Ok |  Hold / A-B / Rec List |  Smart |





| | Original | Sustituto | Original | Sustituto |
|-------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Rec |  Rec |  |  +  Shift + Pause |
|  | Time Shift |  Media |  |  >> |
|  | Red / Repeat |  Red |  |  Subt |
|  | Red / Repeat |  +  Shift + Text |  |  Guide |
|  | Green / Zoom |  Green |  |  Pre Ch |
|  | Green / Zoom |  +  Shift + Eject |  |  +  Shift + Sleep |
|  | Yellow / Angle |  Yellow |  |  Info |
|  | Blue / Goto |  Blue | | |
|  | Index / I<< |  I<< | | |
|  | Size / Stop |  Stop | | |
|  | Rev. / Play/Pause |  Play | | |
|  | Rev. / Play/Pause |  Pause | | |
|  | Sub.P / >>I |  >>I | | |
|  | TV/Radio / << |  << | | |
|  | TV/Radio / << |  TV/R | | |
|  | Lang / Menu |  Dual | | |
|  | Lang / Menu |  D. Menu | | |

