








 


 









 

 
 
 








Original	Sustituto
 Open/Close	 Eject / Surround
 Power/On/Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Clear/Del	 Exit / Cancel / Clear
 Prog/Direct	 TV/Radio /
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat

Original	Sustituto
 Input Up	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Input Down	 CH- / Page-
 Tone	 Sound / Title
 Vol-	 Vol-
 Time/Display	 Display / Media
 Folder Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter/Memo	 OK
 Right	 Right
 Folder Mode	 Picture / Format
 Folder Down	 Down
 Direct/Remote	 D.Menu / Top
 I<</CH-	 I<< / Preset-
 Play	 Play / Slow





Original	Sustituto	Original	Sustituto
 Pause	 Pause / Step / Freeze		
 CH+ />>I	 >>I / Preset+		
 <</Tuning-	 << / Tune-		
 Stop	 Stop / Hold		
 Tuning+ />>	 >> / Tune+		
 Tuner	 Shift + 6		
 iPod/USB	 Shift + 8		
 Disc	 Shift + 3		
 AUX1	 Shift + 1		
 AUX2	 Shift + 2		
 M-XPort	 Shift + 4		
 Clock	 Shift + Sleep / Timer		
 Sleep	 Sleep / Timer		
 RDS	 AV / Input / RDS		
 Dimmer	 Shift + Mute / Dimmer		

Original	Sustituto

