 

 
 

 
 
 

 
 





 






 










 
 

 



 


















 











Original	Sustituto	Original	Sustituto
 On/Standby	 Power	 Red / Movie	 Red
 Sleep	 Sleep	 Green / Music	 Green
 CBL/SAT	 1	 Blue / Game	 Blue
 DVD	 2	 Yellow / Pure	 Yellow
 Blu-ray	 3	 Info	 Info
 Game	 4	 Option	 Options
 AUX	 5	 Volume +	 Vol +
 Media Player	 6	 Volume -	 Vol -
 CD	 7	 Mute	 Mute
 TV Audio	 8	 Back	 Back
 FM	 9	 Setup	 Menu
 M-XPort	 Guide	 Up	 Up
 AM	 Pre Ch	 Down	 Down
 Channel +	 Ch +	 Right	 Right
 Channel -	 Ch -	 Left	 Left
 Tune +	 >>	 Enter	 Ok
 Tune -	 <<	 Favorite Station 1	 List





Original	Sustituto	Original	Sustituto
2 Favorite Station 2	SOUND DUAL Dual		
3 Favorite Station 3	AD SUBT Subt		
MultEQ	E-MANUAL D.MENU D. Menu		
DYN EQ	REPEAT TEXT Text		
DYN VOL	ZOOM Eject		
M-DAX	TIMER AV		

