



Original	Sustituto
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH + / Page+

Original	Sustituto
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Eco	D.Menu / Top
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Left	Left
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze





Original	Sustituto
	Play / Slow
	Tune- / Preset-
	Shift + Tune- / << /
	Tune+ / Preset+
	Shift + Tune+ / >> /
	Fast Rewind / Tune-
	Fast Forward / Tune+
	Shift + Red / Netflix / Search
	Shift + Green / APP / Repeat
	Shift + Yellow / YouTube / Repeat A-B
	Shift + Blue / Prime Video / Random
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	TV 1
	DVD 2

Original	Sustituto
	3
	4
	5
	6
	7
	8
	9
	0
	Enter / OK





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Sustituto
>>/Tune+	+ Shift + >> /
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Red / Netflix / Search
Smart Select 2	Green / APP / Repeat
Smart Select 3	Yellow / YouTube / Repeat
Smart Select 4	Blue / Prime Video / Random
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0

Original	Sustituto
Enter	OK





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original		Sustituto	
	>>/Tune+	+	Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original		Sustituto	
	Enter		OK

