




 

 
























 







Original	Sustituto	Original	Sustituto
 BAND	Band	 HOME SMART	Smart
 DISPLAY	Display	 DISPLAY INFO	Info
 MONO	Mono	 SOUND DUAL	Dual
 MEMO	Memo	 DISC NAV LIST	List
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 Tuning-	Tuning-		Left
 Tuning+	Tuning+		Right
 Preset-	Preset-		Down

Original	Sustituto
 Preset+	 Up

