


 
 












 









Original	Sustituto	Original	Sustituto
	On		Power
	Off		Shift + Power
	HDMI		Shift + 0
	Zone A		Sound / Title
	Zone B		Audio / Lang I/II
	A/D		Red / Netflix / Search
	ATT		Green / APP / Repeat
	SPKR A-B		Yellow / YouTube / Repeat
	7.1		Blue / Prime Video / Random
	TV		Shift + 1
	DVD		Shift + 2
	VCR		Shift + 4
	DSS		Shift + 9
	Tune		Shift + 6
	CD		Shift + 3
	CDR		Shift + Fav / Marker / PC
	Tape		Shift + 5
	AUX1		Shift + 7
	AUX2		Shift + 8
	Input Up		CH+ / Page+
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Input Down		CH- / Page-
	Display		Display / Media
	Surr		Eject / Surround
	Volume-		Vol-
	Top		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home





Original	Sustituto
 Down	 Down
 Exit	 Exit / Cancel / Clear
 T.Tone	 Text / Goto
 Auto	 1
 Stereo	 2
 P.Direct	 3
 Sleep	 Sleep / Timer
 Sleep	 4
 M-Dax	 5
 EQ	 6
 EQ	 Subtitle / EQ
 LIP Sync	 7
 Night	 8
 V-Off	 9
 HT EQ	 Guide / EPG / -/--
 CH Sel	 0
 Treble-	 I<< / Preset-

Original	Sustituto
 Treble+	 >>I / Preset+
 CH-	 Shift + CH- /
 Bass-	 << / Tune-
 CH+	 Shift + CH+ /
 Bass+	 >> / Tune+

 

















 




































	Original	Sustituto	Original	Sustituto
	Power	Power		>>I / Preset+
	Setup	Setup / OPT /		<< / Tune-
	Mute	Mute / Dimmer		>> / Tune+
	Volume+	Vol+		1
	Display	Display / Media		2
	Volume-	Vol-		3
	Up	Up		Green / APP / Repeat
	Left	Left		4
	Enter	OK		5
	Right	Right		6
	Menu	Menu / Home		Blue / Prime Video / Random
	Down	Down		7
	Memo	Smart / List		8
	Pause	Pause / Step / Freeze		9
	Play	Play / Slow		Exit / Cancel / Clear
	Stop	Stop / Hold		0
	I<<	I<< / Preset-		Guide / EPG / -/-





Original		Sustituto		Original		Sustituto	
	Power		Power		2		2
	Mute		Mute / Dimmer		3		3
	Volume+		Vol+		4		4
	Display		Display / Media		5		5
	Volume-		Vol-		6		6
	Tune+		>> / Tune+		7		7
	Info		Info / Angle		8		8
	Preset-		<< / Preset-		9		9
	Enter		OK		CL		Exit / Cancel / Clear
	Preset+		>> / Preset+		0		0
	Menu		Menu / Home		CAT-		CH- / Page-
	Tune-		<< / Tune-		CAT+		CH+ / Page+
	Memo		Smart / List				
	T.Mode		Text / Goto				
	P.Scan		D.Menu / Top				
	Band		Setup / OPT /				
	1		1				

