




 



Original	Sustituto
Power	Power
Sleep	Sleep
CBL/SAT	1
DVD	2
Blu-ray	3
Game	4
AUX1	5
Media Player	6
TV Audio	7
AUX2	8
Tuner	9
USB	Guide
CD	0
Bluetooth	Pre Ch
Phono	Shift + Smart
Internet Radio	Media

Original	Sustituto
CH / Page Up	Ch +
CH / Page Down	Ch -
Eco	3D
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Info	Info
Option	Options
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Back	Back
Setup	Menu
I<</Tune-	I<<
Play	Play







Original		Sustituto	
	Pause		Pause
	>>ITune+		>>I
	Green/Movie		Green
	Smart Select 1		Shift + 1
	Smart Select 2		Shift + 2
	Smart Select 3		Shift + 3
	Smart Select 4		Shift + 4
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow

Original		Sustituto	






 




Original	Sustituto	Original	Sustituto
 Power	 Power	 CH / Page Up	 Ch +
 Sleep	 Sleep	 CH / Page Down	 Ch -
 CBL/SAT	 1	 Vol+	 Vol +
 DVD	 2	 Vol-	 Vol -
 Blu-ray	 3	 Mute	 Mute
 Game	 4	 Up	 Up
 AUX1	 5	 Left	 Left
 Media Player	 6	 Enter	 Ok
 Tv Audio	 7	 Right	 Right
 AUX2	 8	 Down	 Down
 Tuner	 9	 Back	 Back
 USB	 Guide	 I<</Tune-	 I<<
 CD	 0	 Play	 Play
 Bluetooth	 Pre Ch	 Pause	 Pause
 Phono	 Smart	 >>I/Tune+	 >>I
 Internet Radio	 Shift + Smart	 Smart Select 1	 Shift + 1
	 Media	 Smart Select 2	 Shift + 2





Original		Sustituto	
	Smart Select 3	 + 	Shift + 3
	Smart Select 4	 + 	Shift + 4

Original		Sustituto	

