



Original	Sustituto	
	Power	Shift + Power
	AMP Power	Power
	CD	Shift + 3
	Tuner	Shift + 6
	Network	Shift + Fav / Marker / PC
	Phono	Shift + 4
	Recorder 1	Shift + 5
	Recorder 2	Shift + 7
	I<<<	I<<< / Preset-
	>>>	>>> / Preset+
	Pause	Pause / Step / Freeze
	Play	Play / Slow
	Stop	Stop / Hold
	Input	Display / Media
	Source Direct	AV / Input / RDS
	Volume+	Vol+
	Info	Info / Angle

Original	Sustituto	
	Mute	Mute / Dimmer
	Volume-	Vol-
	Time/Top Menu	D.Menu / Top
	Mode	Zoom / Size
	Up	Up
	Left	Left
	Enter	OK
	Right	Right
	Prog/Favorites	Fav / Marker / PC
	Down	Down
	Setup	Setup / OPT /
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6





Original	Sustituto	Original	Sustituto
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Dimmer	+	Shift + Mute / Dimmer
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Repeat		Yellow / YouTube / Repeat





 

 



 





 




 
 
 


 

 
 


Original	Sustituto
 Power	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Tuner	 Shift + 6
 Network	 Shift + Fav / Marker / PC
 Phono	 Shift + 4
 Recorder1	 Shift + 5
 Recorder2	 Shift + 7
 Pitch Control-	 CH- / Page-
 Reset	 Back / Return
 Pitch Control+	 CH+ / Page+
 I<<	 I<< / Preset-
 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Sustituto
 Input	 Display / Media
 Source Direct	 AV / Input / RDS
 Volume+	 Vol+
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Time/Top Menu	 D.Menu / Top
 Mode	 Zoom / Size
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Prog/Favorites	 Fav / Marker / PC
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2





	Original	Sustituto
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	+10	 Guide / EPG / -/--
	0	 0
	Clear	 Exit / Cancel / Clear
	Dimmer	 Shift + Dimmer / Mute / Dimmer
	Random	 Blue / Prime Video / Random
	Repeat	 Green / APP / Repeat
	Repeat	 Yellow / YouTube / Repeat

Original	Sustituto

