



Original	Sustituto
Power	Power
Tv/AV	AV / Input / RDS
1	1
2	2
3	3
Eject	Eject / Surround
4	4
5	5
6	6
Play/Pause	Play / Slow
7	7
8	8
9	9
Stop	Stop / Hold
0	0
-/--	Shift + Guide / EPG / -/--
Return	Back / Return

Original	Sustituto
Mute	Mute / Dimmer
Vol-	Vol-
Up	Up
CH+	CH+ / Page+
Vol+	Vol+
Left	Left
OK	OK
Right	Right
Sys Menu	D.Menu / Top
CH-	CH- / Page-
Down	Down
Display	Display / Media
Picture	Picture / Format
Sound	Sound / Title
Timer	Sleep / Timer
Nicam/A2	Audio / Lang I/II
Lan/Prog-	Shift + CH- / Page-



