



























 

































 

 


 










 











 
 



Original	Sustituto		
	Power		Power
	Mute		Mute / Dimmer
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV / Input / RDS
	Q.View		Fav / Marker / PC
	Up		Up
	Prog+		CH+ / Page+

Original	Sustituto		
	Prog-		CH- / Page-
	Down		Down
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK		OK
	Menu		Menu / Home
	Zoom		Zoom / Size
	I/II		Audio / Lang I/II
	Info		Info / Angle
	P.Timer		Sleep / Timer
	Swap		Back / Return
	Picture		Picture / Format
	Timer		Shift + Sleep / Timer
	Sound		Sound / Title
	Red		Red / Netflix / Search





Original	Sustituto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Stop / Hold
	 Shift + Zoom /
	 Text / Goto
	 Subtitle / EQ
	 Shift + Text /
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Shift + Back / Return

Original	Sustituto

