



Original	Sustituto
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1 / Tracking -	Shift + Left
1 / Tracking -	1
2	2
3 / Tracking +	3
3 / Tracking +	Shift + Right
4	4
5	5
6	6
7	7
8	8
9	9
TV / VCR	TV/Radio /

Original	Sustituto
0	0
Clear	Exit / Cancel / Clear
Menu	Menu / Home
Up / PR +	Up
Up / PR +	CH+ / Page+
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Timer	Sleep / Timer
Down / PR -	CH- / Page-
Down / PR -	Down
Display	Display / Media
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II



Program



Original		Sustituto	
	<< REW		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	FF >>		>> / Tune+
	I<< Prev		I<< / Preset-
	Stop		Stop / Hold
	Next >>I		>>I / Preset+
	Skip		Back / Return
	Title / PBC		Sound / Title
	Slow -		Vol-
	Slow +		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Angle		Info / Angle

Original		Sustituto	





Original	Sustituto
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1 / Tracking -	Shift + Left
1 / Tracking -	1
2	2
3 / Tracking +	3
3 / Tracking +	Shift + Right
4	4
5	5
6	6
7	7
8	8
9	9
TV / VCR	TV/Radio /

Original	Sustituto
0	0
Clear	Exit / Cancel / Clear
Menu	Menu / Home
Up / PR +	Up
Up / PR +	CH+ / Page+
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Timer	Sleep / Timer
Down / PR -	CH- / Page-
Down / PR -	Down
Display	Display / Media
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II



Program



Original	Sustituto
<< REW	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
FF >>	>> / Tune+
I<< Prev	I<< / Preset-
Stop	Stop / Hold
Next >>I	>>I / Preset+
Skip	Back / Return
Title / PBC	Sound / Title
Slow -	Vol-
Slow +	Vol+
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Zoom	Zoom / Size
Angle	Info / Angle

Original	Sustituto

