




 
 


Original	Sustituto
 Power	 Power
 Optical	 8
 Mute	 Mute / Dimmer
 AUX	 7
 BT	 9
 HDMI ARC	 0
 Bass+	 CH+ / Page+
 Up / Vol+	 Up
 Up / Vol+	 Vol+
 Treb+	 >> / Tune+
 Left / I<<	 I<< / Preset-
 Left / I<<	 Left
 Play/Pause / Pair	 Smart / List
 Play/Pause / Pair	 Pause / Step / Freeze
 Play/Pause / Pair	 Play / Slow
 Right / >>I	 >>I / Preset+
 Right / >>I	 Right

Original	Sustituto
 Bass-	 CH- / Page-
 Down / Vol-	 Vol-
 Down / Vol-	 Down
 Treb-	 << / Tune-
 Flat	 Red / Netflix / Search
 Movie	 Green / APP / Repeat
 Music	 Yellow / YouTube / Repeat

