






Original	Sustituto
Power	Power
Mute	Mute / Dimmer
I-II	Audio / Lang I/II
Scale	Smart / List
Sleep	Sleep / Timer
Display	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Jump	Back / Return

Original	Sustituto
0	0
ENT	Fav / Marker / PC
Vol+	Vol+
TV	TV/Radio /
TV	Shift + 1
CH+	CH+ / Page+
Vol-	Vol-
Input	AV / Input / RDS
CH-	CH- / Page-
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
S.Mode	Sound / Title
Down	Down





Original	Sustituto
 P. Mode	 Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text Index	 Info / Angle
 Text Reveal	 Subtitle / EQ
 Text Size	 Zoom / Size
 Text Hold	 Stop / Hold

Original	Sustituto

