








 


 


 























 





 

 













 

 

 
 
 



 

 






Original	Sustituto	Original	Sustituto
	Power		Power
	Tv/VCR		Smart
	Mute		Mute
	Info		Info
	Pause		Pause
	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	OPT		Options
	←		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Rad		TV/R
	Lang		Dual
	S-T		Subt
	TXT		Text





Original	Sustituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Sustituto

