


| Original | Sustituto |
|---|--|
|  Standby |  Power |
|  OSD |  Display / Media |
|  Menu |  Menu / Home |
|  Open / Close |  Eject / Surround |
|  V.Mode |  Picture / Format |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Subtitle |  Subtitle / EQ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Title / PBC |  Sound / Title |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Angle |  Info / Angle |

| Original | Sustituto |
|--|--|
|  Search |  Red / Netflix / Search |
|  0 |  0 |
|  10+ |  Guide / EPG / -/-- |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Zoom |  Zoom / Size |
|  Prog |  TV/Radio / |
|  Left |  Left |
|  Play / Enter |  OK |
|  Play / Enter |  Play / Slow |
|  Right |  Right |
|  Prev |  I<< / Preset- |
|  F.Rev |  << / Tune- |
|  Down |  Down |
|  F.Fwd |  >> / Tune+ |
|  Next |  >>I / Preset+ |
|  Stop |  Stop / Hold |

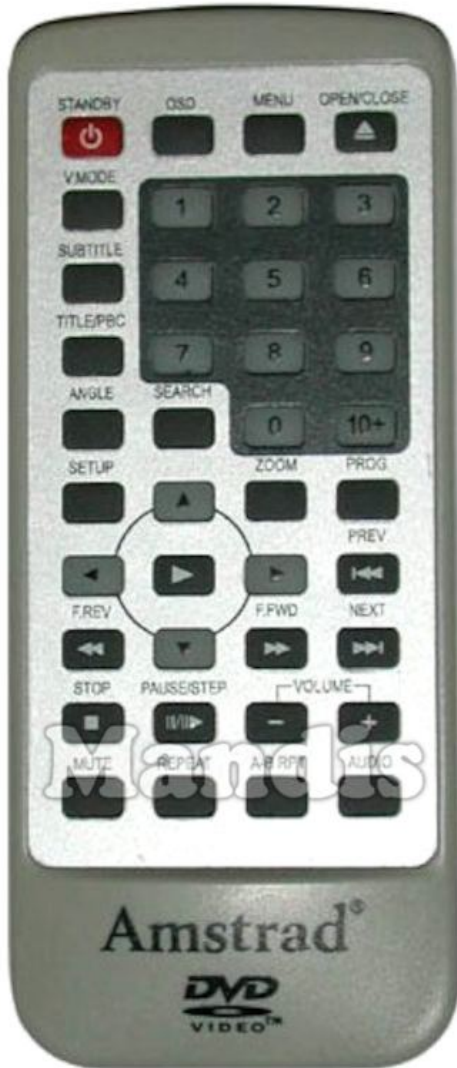



| Original | Sustituto | Original | Sustituto |
|--------------|---------------------------|----------|-----------|
| Pause / Step | Pause / Step / Freeze | | |
| Volume- | Vol- | | |
| Volume+ | Vol+ | | |
| Mute | Mute / Dimmer | | |
| Repeat | Green / APP / Repeat | | |
| A-B RPT | Yellow / YouTube / Repeat | | |
| Audio | Audio / Lang I/II | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

